New Technologies for 6 Gbps Serial Link Design & Simulation, a Case Study

Session #8ICP8

Revision 1.0

SI Consultant Donald Telian

Hitachi GST Paul Larson, Ravinder Ajmani

IBM Kent Dramstad, Adge Hawes





Presented at

cadence designer network



ABSTRACT

The design of third-generation serial links presents a discontinuity in design methods; traditional modeling and simulation techniques are not adequate. Since 6 Gbps serial links have a typical channel loss of -15 dB, signal behavior can no longer be measured at component pins. As such, industry specifications now quantify performance at the output of integrated signal processing blocks deep inside the ICs. To meet this challenge new model types and simulation tools are required such as Algorithmic Modeling Interface (AMI) models and Channel Analysis now available in Allegro PCB SI 16.0. This case study details Hitachi Global Storage Technologies' (GST) use of these new technologies to perform Signal Integrity (SI) channel analysis for future 6 Gbps disk drive designs. AMI models provided by IBM compile the signal processing behaviors of their 6 Gbps SerDes into executable models allowing observation of signals inside the IC. This paper shows how to use AMI model post-processing to verify compliance to industry standard 6 Gbps serial links such as Serial-Attached SCSI (SAS) to Bit-Error Rates (BERs) of 1e15. The performance of a range of system configurations is also demonstrated, along with proper simulation and worst-case analysis techniques. Readers will gain an intuitive sense of what types of channels might be acceptable at 6 Gbps, across a variety of PCB trace length, connector, and cabling combinations. Optimal routing and via implementations are also explored.

Table of Contents

1. Introduction	5
2. Hard Disk Drive Simulation Scenarios.	
3. Adherence to 6 Gbps SAS-2 Specification	7
3.1 Tx RTTL Testing	
3.2 Rx Stress Testing	11
3.3 S-Parameter Limits	15
4. System Analysis	17
4.1 System Analysis Process	18
4.2 TYP – Typical System Analysis	
4.3 WC1 – Worst-Case System One Analysis	
4.4 WC2 – Worst-Case System Two Analysis	
4.5 System Analysis Summary	
5. Key Learnings and Conclusions	
Acknowledgements	
Appendix A: References	
Appendix B: Tool Procedures	
Appendix C: Acronyms Used	
Appendix D: About the Authors	
Table of Figures	
Figure 1: Simplified View of Hard Drive Model	
Figure 2: SAS Specification's Compliance Test Fixtures	
Figure 3: System Configuration Simulation Scenarios	
Figure 4: SAS Specification Note Requiring Simulation	
Figure 5: Tx Testbench Circuit Including RTTL	
Figure 6: Impulse Response of Typical Serial Channel	
Figure 7: Advanced Channel Analysis Stimulus Settings Form	9
Figure 7: Advanced Channel Analysis Stimulus Settings Form	
Figure 8: CA Results from Tx Compliance Simulation	10
Figure 8: CA Results from Tx Compliance Simulation	10 12
Figure 8: CA Results from Tx Compliance Simulation	10 12 12
Figure 8: CA Results from Tx Compliance Simulation	10 12 12 13
Figure 8: CA Results from Tx Compliance Simulation	10 12 13 13
Figure 8: CA Results from Tx Compliance Simulation	10 12 13 13
Figure 8: CA Results from Tx Compliance Simulation	10 12 13 13 14
Figure 8: CA Results from Tx Compliance Simulation	10 12 13 13 14 14
Figure 8: CA Results from Tx Compliance Simulation	10 12 13 13 14 14 14
Figure 8: CA Results from Tx Compliance Simulation	10 12 13 13 14 14 15 16
Figure 8: CA Results from Tx Compliance Simulation	10 12 13 13 14 14 14 15 16
Figure 8: CA Results from Tx Compliance Simulation	10 12 13 14 14 15 16 16
Figure 8: CA Results from Tx Compliance Simulation	10 12 13 14 14 15 16 16 19

Figure 22:	TYP Channel Impulse Response	21
Figure 23:	TYP Channel Eye Convergence	21
Figure 24:	TYP Channel, Eye Width and Height	22
Figure 25:	WC1 Channel System Configuration	23
Figure 26:	WC1 Channel Initial Simulations	23
Figure 27:	WC1 Channel Loss	23
Figure 28:	WC1 Channel Crosstalk	24
Figure 29:	WC1 Channel Impulse Response	24
Figure 30:	WC1 Channel Eye Convergence	25
Figure 31:	WC1 Channel Eye Width and Height	25
Figure 32:	WC2 Channel System Configuration	26
Figure 33:	WC2 Channel Initial Simulation	26
Figure 34:	WC2 Channel Loss and Crosstalk	27
Figure 35:	WC2 Channel Impulse Response	27
Figure 36:	WC2 Channel Eye Convergence	27
Figure 37:	WC2 Channel Eye Width and Height	28
Figure 38:	Design Margin vs. Channel Length	29
	Index of Tables	
Table 1: S	AS Tx Compliance Design Margins	10
Table 2: S	tressed Receiver Test Characteristics from SAS Specification	11
	imulated HDD Rx Compliance Margins	
Table 4: S	ystem Simulation Configurations, Basic Metrics	17
	erial Link System Analysis Process Steps	
Table 6: W	Vorst-Case Parameters, All Channels	22
Table 7: D	esign Margins for Analyzed System Configurations	28

1. Introduction

Over the past decade, Printed Circuit Board (PCB) signaling has made a steady migration to high-speed serial links for the reasons stated in [1]. To enable third-generation (6 to 10 Gbps) serial link design, technology providers have partnered to develop compatible simulation tools and model formats such as Algorithmic Modeling Interface (AMI) models (see [2], [7], [8]). This paper explores the viability of these technologies by applying IBM's first-generation of AMI models on future Hitachi Global Storage Technologies (Hitachi GST) 6.0 Gbps Serial Attached SCSI (SAS) disk drive designs.

Coincident with the emergence of these new simulation technologies has been new industry-wide standards that require them [3]. While first- and second-generation serial links have leaned heavily on physical measurement tools to verify compliance, this is not possible for certain aspects of third-generation links. Relevant signals can no longer be probed externally due to the integration of extensive signal recovery and processing inside Integrated Circuits (ICs). As a result, the signal's true performance can only be probed virtually using simulation tools. Signal integrity has moved inside the ICs [4].

This paper illustrates how to apply the new technologies both to verify compliance to industry standards (e.g., the new 6.0 Gbps SAS specification [3]) and also to determine design margin in a range of system designs. A range of system simulations are included because SAS (and other specifications) verify Transmit and Receive (Tx and Rx) compliance in isolation by connecting them to generic reference loads, as will be explained.

Executing this project required managing the timing and delivery of new specifications, model formats, models, methodologies, and tools. As such, the project began with an assessment phase that looked across the industry to align what could be delivered when. Risks were determined and managed, and backup plans put in place. This was followed by a proof-of-concept phase that collected the primary pieces of the proposed solution, verified they could interoperate, and that data could be generated. Emphasis in this phase was not on the goodness of the data; the goal was simply to prove the pieces could be delivered and function together. With the pieces in place, more traditional design and analysis phases ensued culminating in assembling, or "kitting", the functional simulation environment for wider use both internally at Hitachi GST and externally for their customers.

As will be illustrated, the authors have found that the new tools and models can be used successfully to quantify design margins, guide engineering choices, and construct a functional pre-hardware simulation environment. For this, Cadence Allegro PCB SI GXL version 16.01 [6] was the primary simulation solution. As with any new technology, various bugs and issues surfaced. This paper highlights these issues and documents methods for identifying and working around them by referencing procedures in Appendix B throughout. The processes and solutions described will likely be useful for similar third-generation serial link design projects.

2. Hard Disk Drive Simulation Scenarios

This section will describe how the Hard Disk Drive (HDD) system interface was modeled and simulated. Figure 1 offers a simplified view of the HDD model.

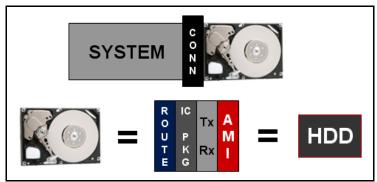


Figure 1: Simplified View of Hard Drive Model

As shown in the upper part of Figure 1, the HDD model is connected to the system through a connector model. The connector is an 8-port S-parameter model that captures the coupling internal to each port. Each SAS HDD has two ports, each with its own differential Tx and Rx. Two different 8-port models were used since mechanically, and hence electrically, the port connections are quite different.

The lower part of Figure 1 shows a breakdown of the HDD model, which includes the PCB route, IC package, analog Tx/Rx models, and the AMI models. Coupled, lossy, frequency-dependent models for the HDD PCB route are used. Within each Rx pair series capacitors are included to couple the high-frequency signal and block DC current. The IC package model consists of two sets of S-parameter models; one to represent the wire-bond package and the other for on-chip routing. Next, the analog portion of the IBM SerDes Tx and Rx is modeled including such elements as die capacitance, terminations, and switching sources for the Tx. The IBM AMI model is the final element required to correctly model the equalization inside the HDD SerDes.

Since IBM was instrumental in the development of the AMI modeling standard, the SerDes models are among the first AMI models available in the industry. These models contain complex signal processing routines that are compiled into separate executables (DLL files) called by the simulation tools.

One of the unique features of AMI models is their equalization behaviors (both Tx FFE and Rx DFE) can not be seen when running normal time domain simulation. Instead, the user must simulate the link using a feature called Channel Analysis (CA). CA first executes a "Characterization" of the channel and then calls the AMI DLL files to apply equalization to the channel. While running normal time domain simulation does produce waveforms, those waveforms are generated using only the analog portions of the Tx and Rx. This distinction is important to understand and keep in mind when working with AMI models.

Figure 2 shows the three test fixtures defined by the SAS Specification [3] to verify compliance of a device's Tx behavior, Rx performance, and passive Port interconnect. Both the Tx and Rx are independently required to deliver good performance against reference SerDes and system loads, while the passive interconnect must comply with various S-parameter limits. Note that the relevant measurement point for the Tx and Rx tests is at the output of the Rx DFE, inside the IC.

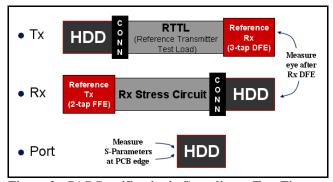


Figure 2: SAS Specification's Compliance Test Fixtures

In addition to the compliance simulations shown above, design margin against the three system configuration scenarios shown Figure 3 is also quantified. The three system models present a variety of channel losses and discontinuities with overall lengths of 12", 20", and 36" as shown. Each scenario is described in more detail in the System Analysis section.

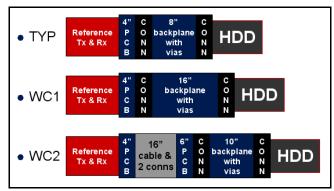


Figure 3: System Configuration Simulation Scenarios

3. Adherence to 6 Gbps SAS-2 Specification

To confirm Hitachi GST's future 6 Gbps Hard Disk Drive (HDD) compliance to new SAS specifications the implementations are tested in three areas:

- 1. **Tx RTTL Testing** requires the HDD Tx to adequately drive a 10-meter cable in such a way that a reference Rx can recover a valid signal
- 2. **Rx Stress Testing** requires the HDD Rx to adequately recover a signal from a worst-case channel as driven by a reference Tx
- 3. **S-Parameter Limits** requires the S-Parameters of both the HDD Tx and Rx portions of the channel stay below specified limits.

These analyses will be presented in the next three sub-sections.

3.1 Tx RTTL Testing

SAS Specification Transmitter (Tx) testing is described in the spec's Table 61 [3]. According to the Table's note g in Figure 4 below, the specified way to confirm proper Tx signaling is to measure eye height and width at the *output* of a 3-tap reference Rx DFE – a node inside the IC

that can only be probed by using simulation. This requirement is unprecedented, yet was necessitated by the fact that the anticipated signal at the *input* to the Rx device is typically not measurable; Tx equalization alone can not overcome anticipated 6 Gbps system loss.

This value is obtained by simulation. It represents the resulting signal output within the reference receiver device (see 5.3.7.4.3) after equalization, when the transmitter device output signal of CJTPAT is transmitted through the reference transmitter test load (see 5.3.2.5).

Figure 4: SAS Specification Note Requiring Simulation

As noted, the reference Rx DFE is to be connected at the other end of the "Reference Transmitter Test Load" (RTTL), described further below. The spec also recommends that reverse channel traffic be present in order to include the effects of crosstalk (see [3] section 5.3.5.3). Spec limits are 100mV eye height and 0.4 UI width at the 3-tap DFE's output.

Implementing this test in Allegro SI raises some considerations. The RTTL is physically a 10-meter cable captured in an S-Parameter model file. While using a long cable helped the spec writers achieve the desired amount of loss (~15dB at 3 GHz), it also introduces a long time delay that is untypical of SAS interconnect. Since a signal requires ~46nS to traverse the RTTL in one direction, this delay does not naturally fit into the default characterization time hard-coded into Channel Analysis. (For example, the worst-case 37" WC2 channel shown in the next section requires only 6nS for end-to-end propagation.) This issue should be watched carefully when using the RTTL in any tool. Fortunately for the testing that follows, the data derived from the default characterization did not vary significantly from the data derived using a manually configured longer characterization (manual process described in [a]).

A Tx testbench circuit that includes the RTTL, crosstalk, and the reference Rx is shown in Figure 5. AMI models are bundled into the Tx and Rx models at the ends in red.

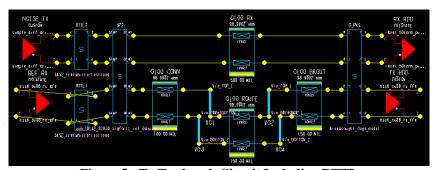


Figure 5: Tx Testbench Circuit Including RTTL

In the circuit above, the Tx circuit under test is the lower channel. The upper channel contributes crosstalk as driven by the "NOISE_TX" at left, through the RTTL, onto the HDD circuit board, through the SerDes package, and into a simple Rx load. The length of the HDD route was chosen to place the crosstalk at (likely) the worst-case point in the UI for the lower channel. The lower channel is best explained and understood by following it from right to left. At the far right is the HDD SerDes Tx which can be simulated with up to four FFE taps in the AMI model. Next is the SerDes package, which includes coupling to the Rx channel. The signal then proceeds through the HDD route which is assumed to be up to 1 inch with two vias as shown. Next are

the coupled SAS connector and the RTTL (connections reversed to preserve the spec's definition of "in" and "out" ports). At the end of the Tx link is a SAS reference Rx, approximated by using the IBM SerDes AMI hard-coded to a 3-tap DFE. This is approximate since it uses the MMSE algorithm to compute the taps instead of the specified LMS algorithm. Although it likely quantizes the taps, it represents the best Rx reference option available at the time of this analysis. Further information on the spec's desired reference Rx is in section 5.3.7.4.3 in [3].

Since, in practice, the Tx FFE can not self-optimize its taps for the channel (as does the Rx DFE), the Tx taps were fixed to the following values in the ami portion of the model: -0.05, 1.0, -0.2921, -0.07. These values implement a full swing on the main cursor (1.0) and the specrecommended -3 dB on the 1st post-cursor (-0.2921). To represent the worst-case the Tx main cursor's voltage swing is set to 850 mV, which is the min value potentially driven by the IBM SerDes. Though not required by the spec, also available in the IBM Tx are pre-cursor and 2nd post-cursor taps. These are set to 5% and 7% respectively based on our observation of typical values set by the tap optimizer internal to the AMI for various channels.

To illustrate the importance of Tx tap settings, Figure 6 shows an impulse response of a typical serial channel. System losses degrade the rise/fall time and pulse shape, spreading it into neighboring bit times (each marked as 166pS in the Figure, for 6 Gbps). All energy outside the cursor's bit time appears as ISI on neighboring bits. The dots in the center of each bit time approximate the desired amount of negative swing that should be driven by the Tx pre- and post-cursor to counteract the pulse spreading and re-shape the signal into a more ideal pulse. In the Tx settings above, the four bit-time values applied are -5%, 100%, -30%, and -7% of the swing.

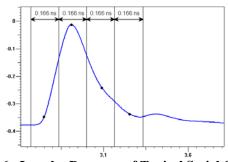


Figure 6: Impulse Response of Typical Serial Channel

With all settings in place and a Channel Analysis characterization performed, the worst-case values for the different forms of Tx jitter and anticipated duty cycle distortion are included in the CA run as shown in Figure 7. (In v16.01 Tx Deterministic Jitter "Dj" must be set manually and CA re-run from the command line as described in [b] to arrive at a final bathtub curve.)



Figure 7: Advanced Channel Analysis Stimulus Settings Form

Simulating the Tx testbench circuit against the HDD route, Figure 8 shows the eye height well within spec at 199 mV at left (spec is 100mV). The eye width at 1e15 at right is marginal at 0.413 UI, yet still within the spec of 0.4 UI.

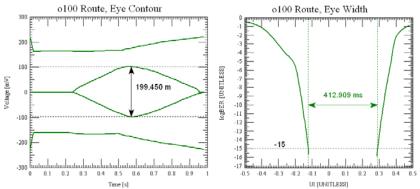


Figure 8: CA Results from Tx Compliance Simulation

Table 1 summarizes the simulated data and associated design margins.

Parameter	Value	Unit
Eye Height (1e6 bits)	199	mV
Eye Height Margin (100mV - 10%)	79	mV
Eye Width (1e15 bits, with Dj)	0.413	UI
Eye Width Margin (spec = 0.4UI)	0.013	UI
Eye Width Margin (target = 0.2UI)	0.213	UI

Table 1: SAS Tx Compliance Design Margins

The Table shows that the eye height has good margin, yet the width raises questions. As such, the eye width margin is calculated both to the spec limits and the HDD SerDes target. While performance to the spec limits seems marginal, we believe this is not a concern because:

- 1. The spec is heavily guard-banded. It suggests that simulation output to be judged at 1e15 instead of the 1e12 used for physical testing reasoning that "simulations typically do not include all aspects of noise that may degrade the signal quality" (see 5.3.3.3.3 in [3]). While this may be true, there are also many limits and inaccuracies associated with physical testing. Due to the slope of the bathtub curves, measuring performance at 1e12 recovers at least 3% more margin in all cases. We believe the simulations performed here are well-toleranced to worst-case and represent a more conservative analysis than is anticipated by the specification.
- 2. Comparing the spec's width compared to the IBM SerDes device's design target we find they differ by 100%. This suggests that the spec might be overly conservative. While we're unclear on the origin and derivation of this value in the spec, we did note that it was one of the last values to be resolved and may still be up for revision. Note that the height spec is 1.7x the actual device's target, while the width spec is 2.0x.
- 3. Good margin is realized to an actual device. While this device may be more robust than others, there appears to be margin to allow for various device characteristics.

In conclusion, simulation reveals that the Tx performs well when tested against the RTTL. The IBM Tx has more EQ capabilities than are recommended by the spec, and these can be configured and tested using the model. We found that CA is capable of applying and adapting all settings and features included in the AMI model to correctly quantify compliance to the spec. This testing also revealed an intermittent issue in the analysis process as described in [c].

3.2 Rx Stress Testing

The SAS Specification [3] outlines Rx compliance testing in "Section 5.3.7.4.4 Receiver device physical testing". Note that this is specified as "physical testing", meaning that it is meant to be done on actual hardware rather than simulation. Indeed, prior to AMI models it was difficult to perform a system-level analog simulation and probe within the IC behind the Rx DFE. However, using IBM's AMI models we can use simulation to get very close to the desired physical testing.

Table 2 describes most of the	e parameters for	Rx stress testing	specified by	the SAS standard.
1 4010 = 4000011000 111000 01 111	pententite term for		Special Co	THE STAN STURMENT

Characteristic	Units	Minimum	Typical	Maximum	Reference
Tx data pattern		CJTP/	AT		Annex A
Tx peak to peak voltage	mV(P-P)			800	5.3.6.5.1
Tx minimum rise/fall time	UI	0.24 (41.6 ps)			5.3.6.5.1
Transmitter equalization	dB			2	5.3.6.5.5
Tx RJ	UI	0.15 (25 ps)			5.3.6.5.1
Tx bounded uncorrelated jitter	UI	0.000 22 (0.036 ps)			
Link dispersion penalty ^{a b}	dB	13			5.3.7.4.4.8
D24.3 delivered eye opening (Z1) b	m∨	75		95	5.3.5.4
D24.3 delivered eye opening (X1) b	UI	0.15			5.3.5.4
NEXT offset frequency b	ppm	20			
Total crosstalk amplitude b c	mV _{rms}	4			
Link dispersion penalty is the WDP of the delivered signal computed with Palloc = 15.4 dB. This specification pertains to the delivered signal at IR or CR during the receiver device compliance test. All adjacent phys in the receiver device shall be active with representative traffic with their maximum amplitude and maximum frequency of operation. Additional pseudo-random crosstalk					

Table 2: Stressed Receiver Test Characteristics from SAS Specification

shall be added, if needed, to meet the total crosstalk amplitude specification.

Observed with a histogram of at least 1 000 hits.

Per the upper portion of the Table, the Tx characteristics can be configured in the simulation to use a Compliance Jitter Pattern (CJTPAT) driven by a SAS Reference Tx with 800mV swing, -2dB de-emphasis, and 42pS edge rates. This allows us to precisely implement the Tx behaviors in the first four rows of the Table above in the simulation.

The spec then calls for an Rj of 0.15 UI (Tx RJ in Table) that it earlier defines as 17x the 1-sigma value for a simulated BER of 1e15. As such, the correct value to enter in the CA form is (0.15/17=) 0.88% UI. The spec also calls out an additional 0.10 UI of sinusoidal jitter in a later section/Table. These jitter components can be directly entered into the "Advanced Settings" tab in CA as shown in Figure 9.



Figure 9: CA Advanced Settings Used for Rx Compliance Testing

To implement the rest of the necessary items for Rx stress testing we need to develop a system-level simulation testbench with the specified behaviors. Utilizing the knowledge and measurements obtained in the "System Analysis" section of this paper, we note that the desired behaviors of the Rx stress testbench lie between WC1 and WC2. As such, the topology shown in Figure 10 was built and tuned until it delivered the specified characteristics. Note that, according to Table 2, the characteristics need to be delivered to the compliance testpoints "IR" or "CR". In our case this is the HDD side of the SAS connector. As such, the SAS connector is included in the testbench circuit, and probes are placed at the connector to measure the signal delivered to IR/CR as shown at right.

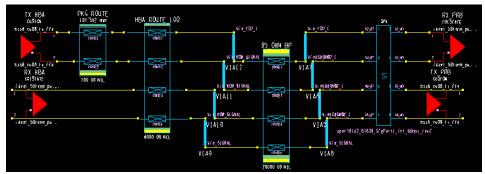


Figure 10: Testbench Circuit for Rx Compliance Stress Testing

From left to right, the Rx_Stress circuit includes:

- 1. SAS Reference SerDes
- 2. Extra package-level routing on the SAS Tx to tune the edge rate and displace the crosstalk
- 3. Six inches of ~100 Ohm microstrip routing to allow the magnitude of pair-to-pair crosstalk to be tuned
- 4. Backplane-type vias for both extra loss, ISI, and discontinuities
- 5. Twenty inches of ~100 Ohm stripline routing, primarily for loss tuning
- 6. Another set of backplane vias
- 7. The PORT1 SAS Connector model, for worst-case crosstalk
- 8. Probes to measure the signal delivered to IR/CR

The plots in Figure 11 demonstrate that the Rx_Stress topology shown above correctly implements the specified values in the Table 2. At left, we see that the system loss delivers the desired minimum value of 150 mV eye height at IR/CR when driven by the 800mV Tx swing. At right, we see that the eye width at IR/CR is reduced to ~0.30 UI as specified at 1e15 bits. The

physical testing desired is specified at 1e12, but the spec derates this in other places to 1e15 for simulation. Note that at this point, no Rx device has been connected and hence DFE has not yet been applied.

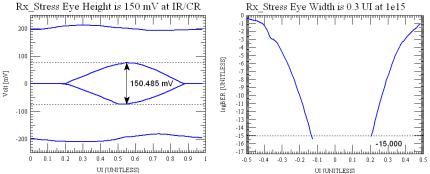


Figure 11: Performance of Rx Compliance Stress Circuit as Measured by CA

Implementing the loss has two components: ISI and SDD21. For ISI, Table 2 calls out a 13 dB "loss dispersion penalty (LDP)". Unfortunately, at the time of this writing and analysis, the spec fails to describe how this is to be calculated and the document it points to is no longer available. Since contacting the spec owners/authors also failed to produce any definition, various discontinuities were added to the Rx_Stress topology to introduce additional ISI. For SDD21 loss, the specification recommends ~15 dB similar to the RTTL. From the desired voltage swing values of Tx=800mV and Rx=150mV we can derive the necessary loss to be 14.5 dB, and implement it by tuning the channel length as shown in the SDD21 plot at left in Figure 12. At right, we see that the models and diff-pair spacing were chosen to provide 4.25 mV rms of crosstalk, slightly above the spec's minimum of 4 mV in Table 2.

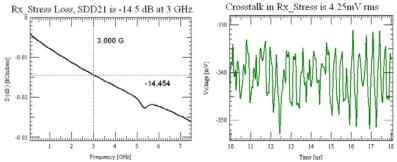


Figure 12: Loss and Crosstalk Performance of Rx Compliance Stress Circuit

At this point, we've addressed all items in Table 2 except for the crosstalk pair's offset frequency. Since CA does not allow us to enter this directly, we can offset the pairs to displace the crosstalk to the center of the other channel's Unit Interval (UI) by introducing extra routing in the upper pair using the "PKG ROUTE" trace segment shown in Figure 10.

With the Rx_Stress circuit properly configured, we are now able to compare the performance of various HDD implementation options in simulation by simply connecting them to the Rx_Stress testbench circuit above. The following sections compare twp HDD routing options: (1) 100 Ohm outer-layer routes, and (2) 85 Ohm inner-layer routes. For each scenario, one layer change on the Rx and one inch of routing is assumed.

100 Ohm Outer-layer Route

Connecting the HDD to the Rx_Stress circuit we arrive at the link shown in Figure 13. The SAS Connector is the blue S-parameter box in the middle of the canvas.

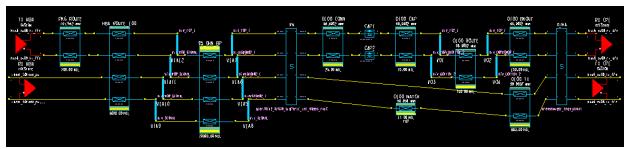


Figure 13: HDD Model Connected to Rx Compliance Stress Circuit

In order to comprehend the contribution of the Rx DFE, at left in Figure 14 is a plot of a short time domain simulation measured at the input to the Rx that shows the eye completely collapsed. After the DFE is applied, the eye is recovered as shown at center to 108 mV at 1 million bits. Over more bits the eye width continues to shrink to 0.408 UI at 1e15 bits as shown at right.

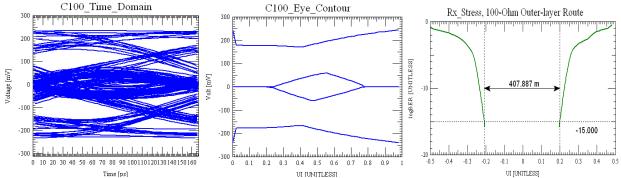


Figure 14: HDD Rx Compliance Plots, 100-Ohm Route

85-Ohm Inner-Layer Route

Testing an 85-Ohm inner layer route we see this route achieves still better performance of 131 mV eye height and 0.418 UI eye width at 1e15 bits as shown in Figure 15.

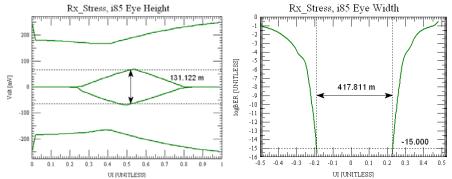


Figure 15: HDD Rx Compliance Plots, 85-Ohm Rounte

Rx Stress Testing Summary

The following table summarizes the simulated performance of the two HDD route styles when connected to the Rx_Stress testbench channel defined by the SAS spec.

Parameter	o100	i85	Unit
Eye Height (1e6 bits)	108	131	mV
Eye Height Margin (60mV - 10%)	37	58	mV
Eye Width (1e15 bits)	0.408	0.418	UI
Margin in UI (target = 0.2 UI min)	0.208	0.218	UI
Margin in pS	35	36	pS

Table 3: Simulated HDD Rx Compliance Margins

Since the tool does not report the eye height at 1e15 bits the margin calculation subtracts an additional 10% of the measured height. This value is derived from and is consistent with the amount the eye width changes between 1e6 and 1e15 bits.

There is good margin on both configurations, which illustrates both the power of the IBM DFE and the robustness of its design targets of 60mV/0.20UI. Note that if the simulations were measured against the SAS specification's 100mV/0.40UI values all measurements would be marginal, as with the Tx RTTL test. Though both implementations performed acceptably, it's interesting to note that the inner-layer 85-Ohm route performed measurably better.

This section has demonstrated that AMI models can be used to perform pre-hardware testing the authors of the SAS Specification outlined for post-hardware physical measurement.

3.3 S-Parameter Limits

The SAS Specification defines magnitude limits for both the Tx and Rx portions of the HDD as shown below. Since in this version of the spec [3] the values for the Tx (spec Table 63) are the same as the Rx values (spec Table 70), the Rx Table is not repeated here.

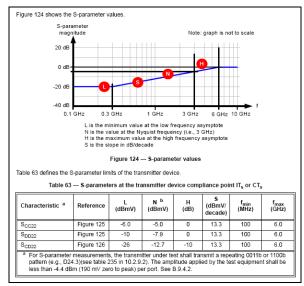


Figure 16: S-Parameter Limits Defined by SAS Specification

S-Parameters were generated using the simulator for both the Tx and Rx port models. Note that it is also possible to perform these tests on physical hardware using a VNA.

For simulated S-Parameter generation, diff-pairs can be drawn in SigXp as shown in Figure 17 for a typical Tx port (left) and Rx port (right). Per the spec, the S-Parameters are measured at the HDD card-edge without the SAS connector in place (the spec refers to this point as ITs/CTs and IRs/Crs).

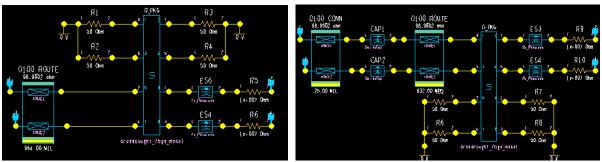


Figure 17: HDD Implementation Configured for S-Parameter Measurement

The procedure for generating the S-Parameters for the passive interconnect in the plots in Figure 18 is given in [d]. In each plot the Specification's limit line is shown in red along with the simulated S-Parameters. In all cases simulated values are below the spec limit lines, as required.

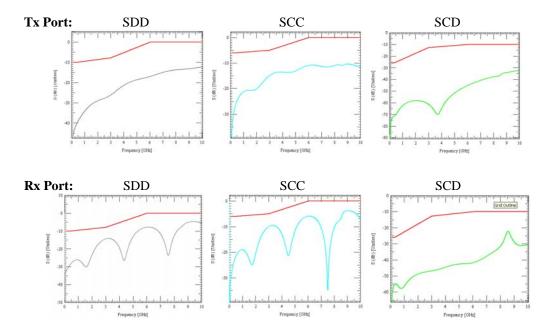


Figure 18: Compliance of HDD Passive Interconnect S-Parameters to SAS Limits

4. System Analysis

In this section the signal integrity performance of the HDDs is analyzed in various typical and worst-case system configurations. While adherence to the spec – as addressed in the previous section - is obviously important, analysis of additional system models is deemed necessary for the following reasons:

- 1) It is difficult for any Specification to adequately ensure performance
- 2) Specification adherence does not provide a sense of anticipated margin in actual systems
- 3) Aspects of the SAS-2 Specification target physical, rather than virtual device testing
- 4) SAS system configurations vary greatly compared to other interfaces such as FibreChannel
- 5) Examining a range of system configurations helps develop an intuitive sense of configuration limits given the technology and data rates at hand

Taken alone, examining only system configurations or specification compliance would likely be insufficient. We believe the combination of both methods provides a more robust sense of system performance. As such, this section examines the behavior and details performance of the following system configurations whose composition is summarized in Table 4.

- a) TYP Typical System Configuration, based on the author's experience
- b) WC1 Worst-Case System One, worst-case seen by the authors in practice
- c) WC2 Worst-Case System Two, attempted retrofit into very bad legacy system

Parameter	TYP	WC1	WC2	Unit
PCB & Cable Length	13	21	37	inches
# of Connectors	2	2	4	#
# of Vias	4	4	4	vias
Propagation Time	2.5	4	6	nS
6 Gbps bits in channel	15	24	36	bits
Channel Loss (SDD21 @ 3 GHz)	-8.9	-13.6	-16	dB

Table 4: System Simulation Configurations, Basic Metrics

As shown, these systems represent a wide range in discontinuities, loss, and length and are configured to provide both a measured and an intuitive sense of how much margin is available in various system configurations.

For the analyses in this section, emphasis is placed on the IBM SerDes' Rx DFE's ability to recover a valid signal given each system configuration. As such, the channels are driven by a minimal SAS Reference Tx (2 taps with -2 dB de-emphasis and a minimum SAS voltage swing of 800 mV ppd). Since the eye shape will be probed at the output of the IBM DFE, all design margins derived in this section are based on IBM design targets. This method will give a good sense of received link performance with a minimal fixed tap Tx. It may also be interesting to drive the link with the HDD's fixed Tx tap settings and check the margins against either a Reference Rx or another vendor's Rx at the other end of the link, but that configuration is not addressed in this section.

4.1 System Analysis Process

Table 5 defines a serial link analysis process that will be applied to each system configuration, and each process step is described briefly below.

Step	Task	Purpose	Output
1	Collect and Connect Models	Build Link Model	Link Ready-to-Run
2	Model Sanity Check	Verify Models	TD Functional
3	Quantify Loss & Crosstalk	Understand & Gauge Link	S21 dB, mV RMS
4	Plot Impulse Response & ISP	Measure ISP, Calculate #bits	#bits for CA
5	Verify Eye Convergence	Test #bits, Confirm Coverage	CA Functional
6	Parameter Determination	Setup for Worst-Case	CA Parameters
7	Corner Case Analysis	Derive Design Margins	Eye h/w Margins

Table 5: Serial Link System Analysis Process Steps

- 1. Collect and Connect Models. This step involves collecting and/or building all the necessary sub-models and connecting them to form the end-to-end link. Be sure all necessary vias, connectors, and series capacitors are included. Approximate trace construction parameters as needed. The output of this step is a link that is expected to simulate correctly in time domain simulation.
- 2. Model Sanity Check. Begin by running a short time domain simulation. Watch for simulation errors, unreasonable voltages or DC shifts, and signals not reaching their destination. When there are problems during this step it is often necessary to temporarily delete elements from the simulation and add them back one at a time until the problematic element is isolated. S-parameter models are particularly suspect of causing problems. Ensure that the end-to-end time delay is reasonable and the voltages look correct. It's possible the eye will be completely closed at the Rx; this does not necessarily mean the simulation is incorrect, particularly at higher speeds. The output of this step is the ability to simulate in the time domain with confidence. Without achieving that, none of the subsequent steps can be performed.
- 3. Quantify Loss and Crosstalk. Quantifying factors such as loss and crosstalk can help double-confirm the link simulation is performing correctly since there is a direct correlation between insertion loss (an Rx/Tx transfer function) and Tx and Rx voltages. In Allegro PCB SI, measuring S21 insertion loss is done by generating S-Parameters. Take the value derived by the tool and double-check it against both the time domain voltages at the Tx and Rx and a hand calculation that sums the loss of each individual element. This will typically match within 10%. It's also important to gain an intuitive sense that can approximate performance across link metrics such as frequency, loss, and crosstalk. The outputs of this step include channel loss expressed in either dB or as a fraction. The latter reveals exactly what fraction of Tx voltage will appear at the Rx, while dB is less straightforward (though more common). A typical way to quantify crosstalk is to calculate the Root-Mean-Squared (RMS) value of the coupled signal on a quiet net. While most waveform tools do not calculate this number, it can be derived by exporting the waveform to a spreadsheet.
- **4. Plot Impulse Response & ISP.** This is done by running a CA characterization of the channel (or, injecting a single pulse into the Tx and measuring the Rx) and viewing the

impulse response waveform. The Interconnect Storage Potential (ISP) can be measured directly from the impulse response as described in [5]. Furthermore, equations in [5] allow you to use the ISP to calculate the number of bits a high-capacity simulation will require to converge on a stable eye diagram. It is also important verify the integrity of the CA characterization. As such the outputs from this step are a good channel characterization, the number of bits to apply in Channel Analysis, and a sense of confidence that that quantity of bits will be sufficient for coverage. This saves time during subsequent simulations, since you are not running more bits than necessary.

- **5. Verify Eye Convergence.** Channel Analysis simulation is run during this step, as various bit-stream lengths are overlaid to verify the eye converges correctly with the number of bits calculated in step 4. This value can be double-confirmed by comparing the number of bits derived with the knee on the bathtub curve plot. As such, the outputs of this step are a verified number of bits and a functional CA environment.
- 6. Parameter Determination. In order to derive meaningful CA results and design margins it's important to input correct parameters into CA for items such as jitter, bit patterns, and crosstalk. There are many components of jitter, and the industry does not always use consistent terminology. During this step you will determine the various sources of jitter imposed by the Tx such as random, deterministic, sinusoidal, and periodic jitter, as well as duty cycle distortion, and map them into the forms provided by CA. Explore what types of data patterns are driven on the link (such as 8b/10b) or if there is a certain pattern (such as CJTPAT) that the link suggests to use. Much of this data is extracted from datasheets and other specifications. The outputs from this step are a complete set of Channel Analysis parameters necessary to derive worst-case eye diagrams and design margins.
- **7. Corner Case Analysis.** This step runs CA to derive relevant eye diagrams and bathtub curves. From these, the necessary design margins are determined. If tolerances in the interconnect need to be tested, additional characterizations must be run. However, note that if tap values are variables in your AMI model they can be explored and adjusted without a new characterization. Compare the CA results derived during this step with link specifications. Insufficient margin may cause you to iterate all or parts of this process.

These steps will now be applied on each of the 6 Gbps system link configurations that follow.

4.2 TYP - Typical System Analysis

Step 1: Collect & Connect Models

Models are collected for the various elements and the trace structures are built and connected to derive the drawing/shorthand description of the TYP channel shown in Figure 19.

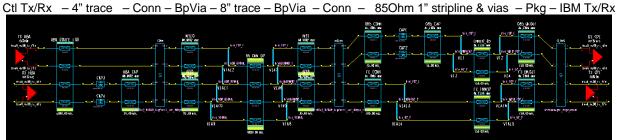


Figure 19: TYP Channel System Configuration

This channel has an overall length of 13" and spans 2 connectors. It includes 4" of route on the controller/expander at left and an 8" midplane route. The routing on the HDD is 85 Ohms and PORT1 connector models are used at both ends of the midplane. This channel represents a typical system configuration with typical loss. The upper channel is the active channel and the lower is the crosstalk channel.

Step 2: Model Sanity Check

For the TYP system a short time domain simulation reveals the eye at the Rx input (Figure 20, at left) is not completely collapsed without any DFE applied. Interestingly, the shape behind the inner eye has the basic shape of the Rx after the DFE is applied (at right). Applying Rx DFE with a 1 million bit CJTPAT shows the eye can be opened to 275mV height and 0.72UI width.

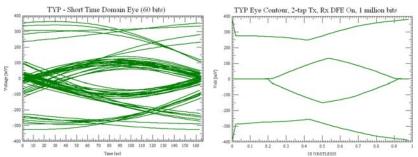


Figure 20: TYP Channel Initial Simulations

Step3: Quantify Loss & Crosstalk

Figure 21 (at left) plots the loss in the TYP Rx (topmost) channel. The loss is -8.9dB which is much less than the SAS spec's RTTL at -15dB, as would be expected of a typical channel. Crosstalk induced in the quiet channel by the active channel appears as shown at right. The red waveform is the Rx pins, the green waveform after the die routing.

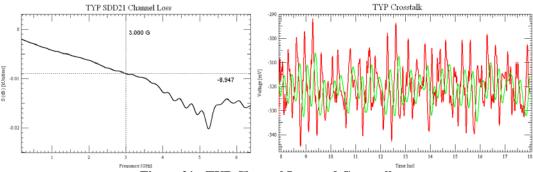


Figure 21: TYP Channel Loss and Crosstalk

The RMS voltage of the crosstalk for TYP can be calculated (by exporting the waveform's spreadsheet data into Excel) to be 9.1mV rms. Interestingly this is higher than the value calculated for both WC channels, which could be due to any or all of the following reasons: more damping due to loss/discontinuities in WC, more crosstalk in the PORT1 model than PORT2, variations in round-trip time, or other reasons. Indeed, changing the connector model in

WC1 from PORT2 to PORT1 raises the crosstalk from 5.6 mV rms to 7.9 mV rms. This agrees with plots that showed PORT1's crosstalk to be ~30% higher than PORT2's.

Step4: Plot Impulse Response & ISP

Figure 22 plots the impulse response in the active channel (left) and the crosstalk channel (right).

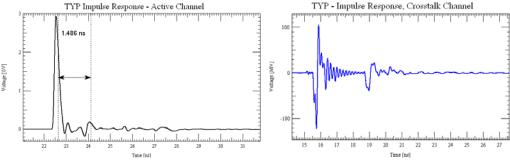


Figure 22: TYP Channel Impulse Response

The end-to-end propagation of TYP is ~2.5nS, hence the time offset of the near-end crosstalk (NEXT) and the ~5nS round-trip settle time in both plots.

The plot at left includes vertical markers measuring the Interconnect Storage Potential (ISP) to be 1.49 nS, or 9 (=ISP/UI=1.49/0.167, rounded up) bit times. This implies that each 8b/10b symbol's performance might be influenced by the prior symbol. Using equation (4) in reference [5] we find that for 8b/10b encoding we may need to run only ~10k bits to ensure adequate coverage. The low ISP suggests that this interconnect will converge quickly to a bounded eye.

Step 5: Verify Eye Convergence

Based on the ISP shown/calculated above, we expect the eye shape to converge quickly. Figure 23 confirms this since the TYP eye contours (produced using the 2-tap Tx driving CJTPAT) change slightly between 10k (red) and 100k bits (green), while the 1,000k (blue) bit pattern can barely be seen. Viewing the "bathtub" curve (at right) further illustrates that above 10k bits the eye width has converged and then continues to decrease linearly to 0.58UI at 1e15 bits.

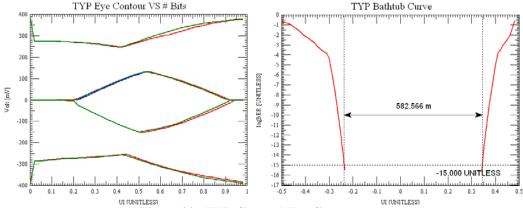


Figure 23: TYP Channel Eye Convergence

Step 6: Parameter Determination

Corner case analysis can be performed by using worst-case values as defined by the IBM AMI, the IBM SerDes, and the SAS Specification. Table 6 summarizes these values and parameters. It should be noted that the process and values associated with tolerancing the simulations for worst-case are quite different than those used for more typical, lower-speed, SI analysis.

#	Variable	Influences	Source	Value	Unit	Apply In	Notes
1	Tx Swing	Eye shape	SAS Spec, Table 61	800	mV	Tx Model	minimum allowed
2	Tx De-emp	Eye shape	SAS Spec. Tables 64 65	-2	dB	Tx AMI	Ref Tx value
3	Bit Pattern	Jitter, Eye	SAS Spec, numerous	CJTPAT		CA Form	
4	Di	Eye, Bathtub	Tx Parameter	23.4	pS p-p	chsim.clm	= 0.14% UI
5	Rotator Linearity	Eye, Bathtub	AMI Model Kit	pr_slow.dat	file	Rx model	pr_fast.dat a bit better
6	On-chip Sparams	Eye shape	AMI Model Kit	0		Tx/Rx models	edit into "just_ideal_corner"
7	Rj	Eye, Bathtub	Tx Parameter	1.4	pS rms	CA Form	= 0.84% UI
8	Duty Cycle Dist.	Eye shape	Tx Parameter	0.05	UI	CA Form	Use 45 as HI%
9	Pj Magnitude	Jitter, Eye	AMI Model Kit	0.05	UI	CA Form	Enter as 0.05
10	Pi Cvcles/UI	Jitter. Eve	AMI Model Kit	0.01	UI	CA Form	Enter as 0.01

Table 6: Worst-Case Parameters, All Channels

As noted, many of these options are input directly in the Channel Analysis "Advanced Settings" form as shown earlier in Figure 7. All the above options can be applied to a single v16.01 CA simulation, with the exception of item 4 "Dj" (deterministic jitter) which currently must be applied by re-running the simulation from a command line using the procedure described in [b].

Step 7: Corner Case Analysis

Simulating with all worst-case values except Dj in place further decreases the bathtub curve, as shown in Figure 24 in blue. Adding in Dj (procedure [b]) produces the worst-case eye width (black, at left) for TYP of 0.34UI at 1e15 bits, providing a good margin of 14% (24 pS) to the IBM design target is 0.20UI minimum. At right is the 1e6 eye height of 244mV. Following the same linear decrease as the eye width, we approximate that the eye height will decrease another 10% to 220mV at 1e15, leaving a good margin of 160mV to the 60mV design target.

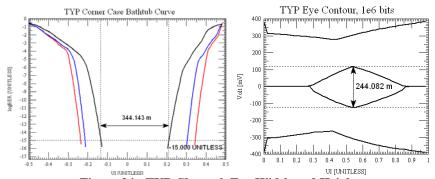


Figure 24: TYP Channel, Eye Width and Height

4.3 WC1 - Worst-Case System One Analysis

Step 1: Collect & Connect Models

The layout drawing and shorthand description of WC1 is shown in Figure 25. This channel includes a much longer backplane trace than TYP and represents the worst-case system design anticipated for this family of HDDs.

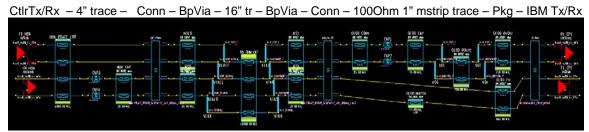


Figure 25: WC1 Channel System Configuration

Step 2: Model Sanity Check

Leftmost in Figure 26 is a very short time domain simulation that shows how WC1 system loss shrinks the Tx waveform (red) substantially as it arrives at the Rx input (blue). Plotting the Rx waveform eye diagram (center) reveals that the eye is almost closed with only a few bits. However, recall that time domain simulation does not include equalization since that portion of the AMI models only appears in CA. Using CA, at right is an eye contour of 1 million bits (8b10b) with a -2dB 2-tap Tx and Rx DFE on. Based on this data, the channel appears to be performing reasonably and warrants further investigation.

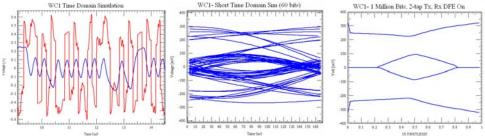


Figure 26: WC1 Channel Initial Simulations

Step3: Quantify Loss & Crosstalk

At left in Figure 27 is a plot of the loss in the Rx (topmost) channel. The loss in WC1 is -13.6dB which is on par with the spec's stressed Rx LDP at -13dB and the RTTL at -15dB. This loss is a combination of all the elements in the worst-case model. To understand the system-level loss, at center is a plot of the loss in the two vias and at right is a plot of the connector loss.




Figure 27: WC1 Channel Loss

A simple summation of the individual elements shows good agreement with the end-to-end loss of -13.6dB measured above leaving 2 dB for the miscellaneous items not quantified here (capacitors, SerDes package, etc.).

Total Loss =
$$2*BpVia + 2*CdVia + 2*Conn + 21"*0.33dB/inch + Misc$$

= $2*1 + 2*0.3 + 2*1 + 21/3 + 2 = 13.6dB$

Crosstalk induced in the quiet channel by the active channel is shown in Figure 28. The red waveform is the Rx pins, green after the die routing (further damped).

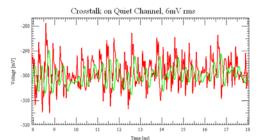


Figure 28: WC1 Channel Crosstalk

Exporting the waveform data into Excel we calculate the RMS value of the crosstalk voltage to be 5.6mV rms based on 3000 time samples across 10 nS. This value is 30% higher than the 4mV rms value recommended by the SAS-2 Specification for a stressed signal input to an Rx, and hence represents both a practical and challenging amount of crosstalk to submit to the high-capacity simulator and Rx DFE.

Step4: Plot Impulse Response & ISP

Figure 29 shows the impulse response of the active channel at left and crosstalk channel at right.

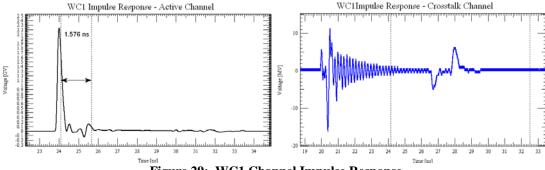


Figure 29: WC1 Channel Impulse Response

Both responses behave as desired, with matching stable/quiet voltages before and after the impulse (note that a ~20nS quiet/stabilization time was used). Since WC1's end-to-end propagation time is ~4ns we see the impulse at the active channel (left) around 24nS while nearend crosstalk can be seen in the quiet channel around 20nS (at right). And since the round-trip time in the channel is ~8nS, additional noise is seen in both plots ~8nS after the initial spikes. The plot at left includes vertical markers measuring the ISP to be 1.58 nS, or 10 (=ISP/UI=1.58/0.166, rounded up) bit times. This implies that each 8b/10b symbol's

performance might be influenced by the prior symbol. The ISP is similar to that found with TYP since the discontinuities in the channels are similar; it is primarily the length that has changed. Using equation (4) in reference [5] we find that for 8b/10b encoding we may need to run only ~100k bits to ensure adequate coverage. The ISP suggests that this interconnect will converge to a bounded eye prior to 1e6 bits.

Step 5: Verify Eye Convergence

Based on the ISP shown/calculated above, we expect the eye shape to continue to change as the number of bits increases up to ~100k bits. Figure 30 at left confirms this by showing the WC1 eye contours using 8b10b patterns of different lengths, 10k bits (red), 100k (green), and 1,000k (blue). The eye height/width continues to visibly decrease with the number of bits until it stabilizes around 1e6 bits, requiring an order of magnitude more bits than TYP as seen in the knee of the bathtub at right.

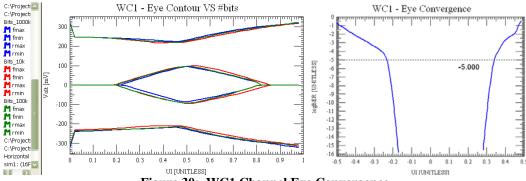


Figure 30: WC1 Channel Eye Convergence

Step 6: Parameter Determination

The worst-case parameters for WC1 are the same as those for TYP. Refer to TYP step 6.

Step 7: Corner Case Analysis

Applying all corner case values to WC1 (Figure 31, red) narrows the typical bathtub curve (in green) significantly to produce an eye width of 0.25 UI. This has 0.05 UI (9 pS) margin to the IBM design target of 0.20 UI, which is acceptable for this type of analysis. At right below is the 1e6 bit eye height (CJTPAT, Ref Tx) of 172mV which derates to 95 mV of margin at 1e15 given a 10% reduction and 60mV target. As such, WC1 has good margin against worst-case analysis.

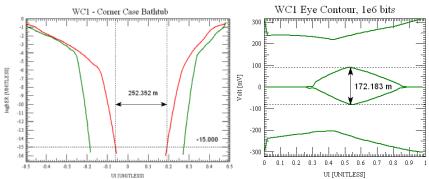


Figure 31: WC1 Channel Eye Width and Height

4.4 WC2 - Worst-Case System Two Analysis

Step 1: Collect & Connect Models

A drawing/shorthand description of the WC2 channel is shown in Figure 32.

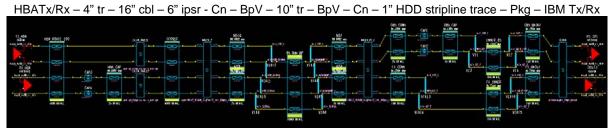


Figure 32: WC2 Channel System Configuration

This channel has an overall length of 37" and spans 4 connectors. It includes 16" of differential flat cable (model includes mated connectors on both ends), a 6" legacy interposer PCB, and a 10" backplane. The backplane, though shorter, is similar to the one in WC1. The interposer uses 7/7 (trace/space widths) for a differential impedance of 85 Ohms. This channel is contrived for lots of loss, many impedance changes/reflections, and is likely well beyond the worst system design the 6 Gbps HDD might be connected to in practice.

Step 2: Model Sanity Check

After confirming proper operation for the majority of the WC2 models during the previous two sections, confidence is high that they are operating correctly. As shown in Figure 33, for WC2 even a short time domain simulation reveals the eye at the Rx input is basically closed without any equalization applied,. This channel represents a significant challenge for the Rx DFE.

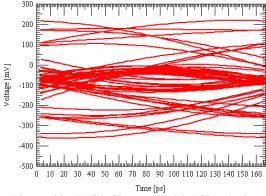


Figure 33: WC2 Channel Initial Simulation

Step3: Quantify Loss & Crosstalk

Figure 34 (left) plots the loss in the WC2 Rx (topmost) channel as -16dB, significantly higher than the spec's stressed Rx LDP at -13dB and slightly more than the RTTL at -15dB. Crosstalk induced in the quiet channel by the active channel appears as shown at right. The red waveform is the Rx pins, green after the die routing (further damped). The RMS voltage of the crosstalk for WC2 was calculated to be 7.4mV rms.

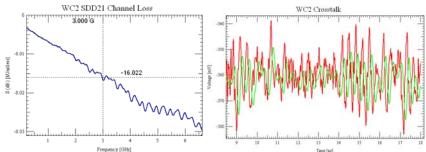


Figure 34: WC2 Channel Loss and Crosstalk

Step4: Plot Impulse Response & ISP

Figure 35 shows the active channel (left) and crosstalk channel (right) impulse response.

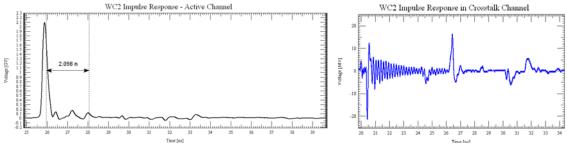


Figure 35: WC2 Channel Impulse Response

The end-to-end propagation of WC2 is ~6nS, hence the time offset of the NEXT and the 12nS round-trip settle time in both plots. The longer settle time suggests that a larger quiet time of 30nS should be used for WC2 during Characterization. The ISP of 2.1 nS (12 bits) is longer than WC1 and the overall ringing lasts longer likely due to more discontinuities. Equation (4) in [5] suggests that 100k bits would be necessary to bound eye opening behavior for this channel, similar to the other channels.

Step 5: Verify Eye Convergence

Based on the ISP shown/calculated above, we expect the eye shape to continue to change as the number of bits increases. Figure 36 confirms this by showing the WC2 eye contours using a CJTPAT of different lengths, 10k bits (red), 100k (green), 1,000k (blue), and 10,000k (black, can't be seen). This channel converges similar to the others. CA simulations of 100k bits will be sufficient, as confirmed by the knee on the bathtub at right.

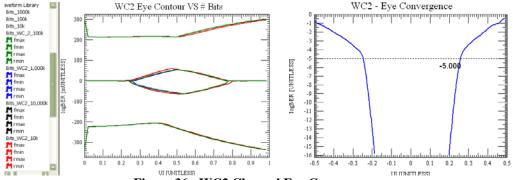


Figure 36: WC2 Channel Eye Convergence

Step 6: Parameter Determination

The worst-case parameters for WC2 are the same as those for TYP. Refer to TYP step 6.

Step 7: Corner Case Analysis

Applying corner case analysis decreases the eye a bit further as shown in Figure 37 in red. Adding in the Dj of 0.14UI narrows the eye further as shown in black to 0.22 UI for 1e15 bits. This reveals that WC2 has little margin to the design target of 0.20 UI minimum and represents a marginal system configuration.

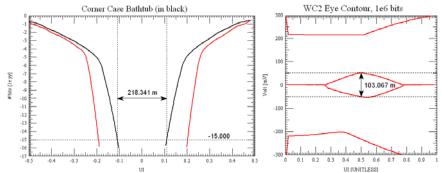


Figure 37: WC2 Channel Eye Width and Height

4.5 System Analysis Summary

To summarize our system analysis we have tested three system configurations: TYP, WC1, and WC2. These systems have been described previously, and can be characterized by the basic metrics repeated in Table 7 below. Though all three systems performed decently in a typical analysis using 1 million bits, corner case analysis shows design margin becomes minimal at 1e15 bits for WC2 as shown. To the IBM Rx DFE's credit, it was able to compensate for the loss and ISI in all channels showing positive margin in all cases. Clearly the boundary of acceptable system configuration lies somewhere near WC2. Sound engineering judgment can determine the boundary as guided by the design process and tools, and proper hardware verification.

Parameter	TYP	WC1	WC2	Unit
PCB & Cable Length	13	21	37	inches
# of Connectors	2	2	4	#
# of Vias	4	4	4	vias
Propagation Time	2.5	4	6	nS
6 Gbps bits in channel	15	24	36	bits
Channel Loss (SDD21 @ 3 GHz)	-8.9	-13.6	-16	dB
Crosstalk	9.1	5.6	7.4	mV rms
ISP	1.5	1.6	2.1	nS
#bits for Coverage	1e4	1e5	1e5	bits
Corner Eye Height (1e6 bits)	244	172	103	mV
Eye Height Margin (60 mV -10%)	160	95	30	mV
Typ Eye Width (1e6 bits)	0.72	0.59	0.52	UI
Corner Case Width (1e15 bits)	0.344	0.252	0.218	UI
Margin in UI	0.144	0.052	0.018	UI
Margin in pS	24	9	3	pS

Table 7: Design Margins for Analyzed System Configurations

To further illustrate the system configuration design boundary, consider the plot of design margin versus channel length in Figure 38. Even though there are many factors involved besides length, we can extrapolate the lines in the plot to estimate where all margin might be consumed.

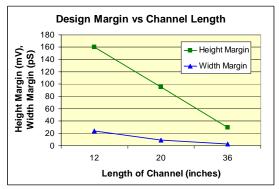


Figure 38: Design Margin vs. Channel Length

The data presented in this section suggests that the IBM Rx DFE in the HDD can compensate for a minimal fixed-tap Tx on the other end of the link, even in the presence of crosstalk. However, the boundary for robust system performance is close to the system configuration and loss of WC2. This correlates well with the SAS-2 Specification's view that Tx and Rx components must work together to overcome a channel loss of around -15dB.

5. Key Learnings and Conclusions

Throughout this report we have determined the following items.

- 1. It is possible to construct a useful 6 Gbps SAS simulation environment using Allegro SI and IBM SerDes AMI models. The performance of this environment appears to align well with both SerDes vendor and the SAS specification's expectations.
- 2. As shown through simulation, the HDD implementation and IBM SerDes performed well with good margin against both compliance tests and actual system loads.
- 3. More margin can be obtained by routing the Rx channels at 85 Ohm (instead of 100 Ohm) differential impedance. The Tx channels can be routed either way.
- 4. Even against worst-case tolerances, decent margin exists in applications around -14 dB (SDD21 @ 3 GHz) channel loss. Worst-case margins become questionable around -16 dB. Typical applications are likely less than -10dB.
- 5. The SAS Specification's physical Rx stress test environment can be implemented through simulation. In this setting, the HDD SerDes' DFE performed exceptionally well with margins in the 20% (or better) range.
- 6. Spec-level Tx testing also performed well. Although eye width measurements were marginal to the current spec, this is not believed to be an issue due to the reasons stated.
- 7. Spec-level passive S-Parameter limits were achieved for all ports, as verified through simulation.
- 8. Good enhancements to CA include: GUI-entry of Tx Dj, characterization stop time, and bathtub curves for eye height.

In conclusion, we have seen that as serial link frequencies continue to increase so do system loss and IC integration complexity. These changes have required new types of models, tools and specifications, and even a new approach to signal integrity engineering in general. This paper has shown that AMI models are starting to appear and illustrated how they can be used in practice. Cadence has delivered a functional simulation environment for these models that has been used for next-generation product design and validation as described.

Acknowledgements

The authors wish to thank Cal Yoshikawa, Cliff Jeske, and Michael Flannery at Hitachi GST for their interest and support in pioneering new simulation methodologies as described here. Also Joe Abler and Kevin Kramer at IBM for their support of advanced SerDes SI through advancing the AMI standard and model releases. Additional thanks to Hemant Shah, Ken Willis, Ambrish Varma, and Brad Griffin of Cadence for driving the timely and robust release of AMI capabilities in Allegro PCB SI. C. Kumar for his visionary effort behind the AMI solution, and Todd Westerhoff of SiSoft for helping to drive the standard across the industry. Without the efforts of these and others this work would not have been possible.

Appendix A: References

[1] "Adapting Signal Integrity Tools and Techniques for 6 Gbps and Beyond", Donald Telian, CDNLive! 2007 http://www.cdnusers.org/LinkClick.aspx?link=cdnlive/na2007/5_SPB/8.3presentation.pdf&tabid=419&mid=1134

[2] "IBIS-ATM Update: SerDes Modeling and IBIS", Todd Westerhoff, September 2007, http://www.vhdl.org/pub/ibis/summits/sep07a/westerhoff1.pdf

[3] SAS Specification, SAS-2 Working Draft, Project T10/1760-D, Revision 14, 28 January 2008, ISO/IEC 14776-152:200x. http://www.t10.org/ftp/t10/drafts/sas2/sas2r14.pdf

[4] "Signals on Serial Links: Now you see 'em, now you don't. What can we do?" Donald Telian, April 2007, http://www.cdnusers.org/InterviewDonaldTelian/tabid/404/Default.aspx

[5] "New Techniques for Designing and Analyzing Multi-GigaHertz Serial Links", Telian, Wang, Maramis, Chung – DesignCon 2005, http://www.cdnusers.org/community/allegro/Resources/resources pcbsi/mgh/TP Dcon05 ISP CA Intel.zip

[6] Cadence Allegro PCB SI GXL, version 16.01, 16.1 s006 (v16-1-53M) [1/24/2008] i86. Version 16.0 (or later) is required to run AMI models, this version of 16.01 (or later) is the first to remove requirements to run various IBM AMI features from a command-line. See: http://www.cadence.com/products/si_pk_bd/pcb_si/index.aspx

[7] Developing Interoperable Algorithmic Models Quickly – A Tutorial, Varma, Warwick, Kumar, Willis, Hawes, Mu, DesignCon 2008 TF-MP2, http://www.designcon.com/2008/conference/tf mp2.html

[8] Miscellaneous AMI presentations from SiSoft: http://www.sisoft.com/pub_ibis.asp

Appendix B: Tool Procedures

[a] Process for running a longer CA characterization in v16.01: (1) run a GUI characterization, (2) go to channel.run directory and open tlsim.log, (3) re-run the tlsim command line in a DOS window changing – e to the desired value in nS, (4) open the new .sim file in SigWave and delete all waveforms except the Rx, rename it to "rx", and save as .sim, (5) convert the .sim file to a .txt file of the proper format for a

characterization, (6) place both the new .sim and .txt file into the /char directory, giving them the same names as the old files, (7) re-run CA from the GUI and it will now use the longer characterization. Another process (not tested, though likely simpler), would be to use the following line to run cktsim to call tlsim and generate both the .sim and .txt files: cktsim -stop 6e-08 -t 1.6 -BhvrTvOff -tbl net.txt -o net.sim main.spc

[b] To include Tx deterministic jitter "Dj" in Channel Analysis add the term (txdj 0.14) above the (txrj 0.0084) line in chsim.clm and re-run from the command line by typing: chsim chsim.clm. This will produce textual output only which can be read into SigWave using one of the procedures listed in [e].

[c] This analysis revealed an intermittent issue in the simulator in which it would include only the Rx AMI model during CA and not the Tx model. This may occur when using coupled black-box models that specify PinConnections from all pins to all other pins, allowing the tool to incorrectly trace the primary Rx to its coupled Tx. This can be corrected by including only the through connections (i.e., not coupled connections) in the PinConnections portion of the model. If you suspect this behavior, it can be verified by examining the "rxplugs" portion of the 'chsim.clm' file in the /results directory and ensuring all anticipated AMI models are present.

[d] The procedure for verifying S-Parameter compliance to specification limits in SigXp is as follows:

- 1. Extract or configure the differential routing on the canvas
- 2. Add in any package models, tie off unused pins
- 3. Bundle any on-chip S-Parameters into an Espice subckt, connect at IC location
- 4. Add 10 Meg resistors at IC (to imitate the unconnected VNA probes at IC)
- 5. Add probe points to the ends, using standard 1234 port numbering
- 6. Generate S-Parameters to produce a single-ended *.s4p files
- 7. Convert to mixed-mode S-parameters using the following command line syntax: ts2dml -MixedModeSparam=1324 <in>.s4p <out>.s4p
- 8. Plot the magnitudes as follows: SDD=S11, SCD=S31, SCC=S33
- 9. Import limit line point pair columns text file using File->Import->Hspice
- 10. Compare the plots against limits to determine compliance.

[e] There are (at least) three ways to view text format waveforms created by CA in SigWave: (1) convert the .txt files to .sim files using the txt2sim.lsp program found in the install, or (2) import the text file into SigWave using File->Import->Hspice (prior to doing this, you must first make the .txt file look like a .lis file by place an "x" into the top line of the file and adding an empty line beneath it), or (3) view/plot the .txt data in a program other than SigWave such as Excel.

Appendix C: Acronyms Used Algorithmia Modeling Interfese

AMI	Algorithmic Modeling Interface
CA	Channel Analysis, a feature in AllegroSI
CJTPAT	Compliance Jitter Patter
DFE	Decision Feedback Equalization, an Rx EQ technique
EQ	Equalization
FFE	Feed Forward Equalization found in the Tx
GUI	Graphical User Interface, typically for Allegro SI
HDD	Hard Disk Drive
IBM	International Business Machines, a SerDes supplier
IC	Integrated Circuit
ISI	Inter-Symbol Interference, a noise source in serial links
NEXT	Near-end crosstalk

PCB	Printed Circuit Board
ppd	Peak-to-peak differential, typically a voltage measurement
RMS	Root-Mean-Squared, a measure of non-static signals
Rx	SerDes Receiver
RTTL	Reference Transmitter Test Load, from www.t10.org
SAS	Serial Attached SCSI, an industry standard interface
SAS-2	The newer SAS Standard that includes 6 Gbps operation
SerDes	Serializer/Deserializer, IC core with Tx, Rx, etc.
Tx	SerDes Transmitter
TYP	TYPical system configuration model – a baseline system model
UI	Unit Interval, or one bit time
WC1	Worst-Case One – the anticipated worst-case model for the HDD connection
WC2	Worst-Case Two – aanother baseline system model

Appendix D: About the Authors

Donald Telian is an independent Signal Integrity Consultant. Building on over 23 years of SI experience at Intel, Cadence, HP, and others, his recent focus has been on helping customers correctly implement today's Multi-GHz serial links. He has published numerous works on this and other topics. Donald is widely known as the SI designer of the PCI bus and the originator of IBIS modeling and has taught SI techniques to thousands of engineers in more than 15 countries. Donald can be reached at: telian@sti.net

Paul Larson is a senior Hard Disk Drive (HDD) development engineer for Hitachi GST. Prior to that he held a similar position at IBM, for a combined 29 years of experience in HDD development, integration and in ensuring FC and SAS HDD Signal Integrity. Paul can be reached at: paul.larson@hitachigst.com

Ravinder Ajmani is a Senior Engineer with Hitachi GST. He has over 15 years of experience on High-speed PCB Design, Signal integrity, and Electromagnetic Compatibility. During this period he has worked on several generations of disk drive products, and resolved numerous design and customer integration issues with these products. Ravinder can be reached at: Ravinder.Ajmani@HitachiGST.com

Kent Dramstad is an ASIC Application Engineer at IBM. He has over 27 years of experience working on both power and signal integrity issues for a wide variety of applications. His current emphasis is on helping customers select and integrate IBM's series of High Speed Serdes (HSS) cores into their ASIC designs. Kent can be reached at: dramstad@us.ibm.com

Adge Hawes is a Development Architect for IBM at its Hursley Labs, United Kingdom. He has worked for IBM for more than 30 years across such hardware as Graphic Displays, Printing Subsystems, PC development, Data Compression, and High-Speed Serial Links. He has represented the company in many standards bodies such as PCI, SSA and Fibre Channel. Recently he has moved from Digital Logic to Analog and Mixed-Signal, where he develops simulators for IBM's High Speed Serial Link customers. Adge can be reached at: adge@uk.ibm.com